

ECE171A: Linear Control System Theory

Lecture 8: System Response

Nikolay Atanasov
natanasov@ucsd.edu

UC San Diego
JACOBS SCHOOL OF ENGINEERING
Electrical and Computer Engineering

Outline

System Response to Test Input Signals

Impulse Response

Step Response

Frequency Response

Outline

System Response to Test Input Signals

Impulse Response

Step Response

Frequency Response

System Response

- ▶ Consider an LTI ODE system:


$$\begin{aligned}\dot{\mathbf{x}} &= \mathbf{A}\mathbf{x} + \mathbf{B}\mathbf{u}, & \mathbf{x}(t_0) &= \mathbf{x}_0 \\ \mathbf{y} &= \mathbf{C}\mathbf{x} + \mathbf{D}\mathbf{u}\end{aligned}$$

- ▶ The system output satisfies the **convolution equation**:


$$\mathbf{y}(t) = \mathbf{C}e^{\mathbf{A}(t-t_0)}\mathbf{x}_0 + \int_{t_0}^t \mathbf{C}e^{\mathbf{A}(t-\tau)}\mathbf{B}\mathbf{u}(\tau)d\tau + \mathbf{D}\mathbf{u}(t)$$

- ▶ The response $\mathbf{y}(t)$ is evaluated by separating out the short-term response from the long-term response
- ▶ **Transient response**: the response after an input is applied and before the output settles at its final value
- ▶ **Steady-state response**: the portion of the output response that reflects the long-term behavior of the system under the given input
 - ▶ For constant inputs, the steady-state response will often be constant (e.g., **step response**)
 - ▶ For periodic inputs, the steady-state response will often be periodic (e.g., **frequency response**)

System Response

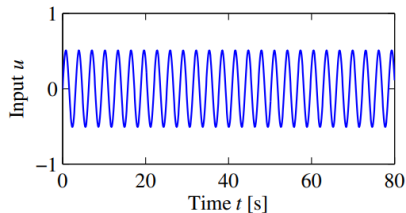

(a) Input

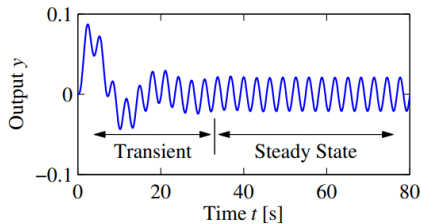

(b) Output


Figure 6.8: Transient versus steady-state response. The input to a linear system is shown in (a), and the corresponding output with $x(0) = 0$ is shown in (b). The output signal initially undergoes a transient before settling into its steady-state behavior.

Test Input Signals

- ▶ The transient and steady-state response of a system are often studied for specific test input signals

Test Signal	$u(t)$	$U(s)$
Impulse	$u(t) = \delta(t) = \begin{cases} \infty, & t = 0, \\ 0, & t \neq 0 \end{cases}$	$U(s) = 1$
Step	$u(t) = H(t) = \int_{-\infty}^t \delta(\tau) d\tau = \begin{cases} 1, & t \geq 0, \\ 0, & t < 0 \end{cases}$	$U(s) = \frac{1}{s}$
Ramp	$u(t) = tH(t) = \begin{cases} t, & t \geq 0, \\ 0, & t < 0 \end{cases}$	$U(s) = \frac{1}{s^2}$
Parabola	$u(t) = \frac{t^2}{2} H(t) = \begin{cases} \frac{t^2}{2}, & t \geq 0, \\ 0, & t < 0 \end{cases}$	$U(s) = \frac{1}{s^3}$
Sine	$u(t) = \begin{cases} \sin(\omega t), & t \geq 0, \\ 0, & t < 0 \end{cases}$	$U(s) = \frac{\omega}{s^2 + \omega^2}$
Cosine	$u(t) = \begin{cases} \cos(\omega t), & t \geq 0, \\ 0, & t < 0 \end{cases}$	$U(s) = \frac{s}{s^2 + \omega^2}$

Steady-state Error

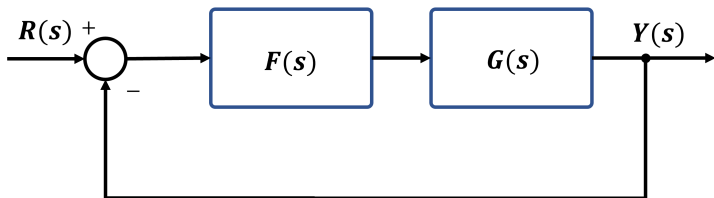

- ▶ Consider a feedback system with controller $F(s)$ and plant $G(s)$
- ▶ The forward-path gain $F(s)G(s)$ is a rational function of the form:

$$F(s)G(s) = k \frac{(s - z_1) \cdots (s - z_m)}{s^q (s - p_{q+1}) \cdots (s - p_n)}$$

where $0 \leq q \leq n$ explicitly denotes the number of poles equal to zero:

$$p_1 = p_2 = \cdots = p_q = 0$$

Steady-state Error

- ▶ We will examine the steady-state error for test signals of the form $r(t) = \frac{t^d}{d!}$ for $t \geq 0$, such as step ($d = 0$), ramp ($d = 1$), parabola ($d = 2$), etc.
- ▶ Consider the error signal $e(t) = r(t) - y(t)$ with Laplace transform:

$$E(s) = R(s) - Y(s) = R(s) - F(s)G(s)E(s)$$

- ▶ The reference-to-error transfer function is:

$$E(s) = \frac{1}{1 + F(s)G(s)} R(s)$$

- ▶ When $r(t) = t^d/d!$ and $R(s) = 1/s^{d+1}$, the steady-state error can be obtained by the final value theorem:

$$\lim_{t \rightarrow \infty} e(t) = \lim_{s \rightarrow 0} sE(s) = \lim_{s \rightarrow 0} \frac{1}{(1 + F(s)G(s))s^d}$$

Steady-state Error

- ▶ When $r(t) = t^d/d!$ and $R(s) = 1/s^{d+1}$, the steady-state error is:

$$\lim_{t \rightarrow \infty} e(t) = \lim_{s \rightarrow 0} sE(s) = \lim_{s \rightarrow 0} \frac{1}{(1 + F(s)G(s))s^d}$$

- ▶ The error is determined by the **error coefficient**:


$$s^d F(s)G(s) = k \frac{s^d (s - z_1) \cdots (s - z_m)}{s^q (s - p_{q+1}) \cdots (s - p_n)}$$

- ▶ Three cases are possible, assuming that the system is **stable** (all poles of $sE(s)$ are in the open left-half plane):
 - ▶ If $d < q$, then $s^d F(s)G(s)$ will contain a term s^{q-d} in the denominator and $sE(s)$ will contain $q - d$ zeros at the origin. Hence, $\lim_{s \rightarrow 0} sE(s) = 0$ and **zero steady-state error** will be achieved.
 - ▶ If $d = q$, then $sE(s)$ will contain no zeros at the origin and a **constant finite steady-state error** will be achieved.
 - ▶ If $d > q$, then $sE(s)$ will have $d - q$ poles at the origin. Hence, $\lim_{s \rightarrow 0} sE(s) = \infty$ and an **infinite steady-state error** will be achieved. In other words, the system output will not track the reference input at all.

Control System Type

- ▶ The results on the previous slide indicate that the number q of poles at the origin in $F(s)G(s)$ determines the type of reference inputs that the closed-loop system is able to track
- ▶ The number q of poles at the origin in $F(s)G(s)$ is called **system type**
- ▶ A system of type q can track polynomial reference signals of degree q or less to within a constant finite steady-state error
- ▶ During control design, the controller gain $F(s)$ can be chosen to achieve a certain number of poles at the origin if the process $G(s)$ does not have the required number of poles to track a desired reference signal
- ▶ It appears that having more integrators ($1/s$) in $F(s)G(s)$ is better since it allow tracking higher-order reference signals. However, the larger q is, the harder it is to stabilize the system since integrators slow the response down

Example: Mobile Robot Heading Angle Control

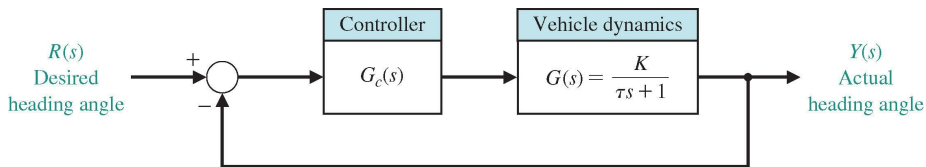

Copyright ©2017 Pearson Education, All Rights Reserved

- ▶ Consider a heading-angle steering control system for a mobile robot:

$$\text{Heading dynamics: } G(s) = \frac{K}{\tau s + 1} \quad \text{Control gain: } G_c(s) = K_1 + \frac{K_2}{s}$$

- ▶ What is the steady-state error of the closed-loop system for a step input and a ramp input?

Example: Mobile Robot Heading Angle Control

▶ If $K_2 = 0$:

- ▶ the forward path gain is: $G_c(s)G(s) = \frac{KK_1}{\tau(s+1/\tau)}$
- ▶ the system is type 0 with error coefficient:

$$K_p = \lim_{s \rightarrow 0} G_c(s)G(s) = KK_1$$

- ▶ the steady-state error for a step input is:

$$\lim_{t \rightarrow \infty} e(t) = \frac{1}{1 + K_p} = \frac{1}{1 + KK_1}$$

▶ If $K_2 > 0$:


- ▶ the forward path gain is: $G_c(s)G(s) = \frac{KK_1(s+K_2/K_1)}{\tau s(s+1/\tau)}$
- ▶ the system is type 1 with error coefficient:

$$K_v = \lim_{s \rightarrow 0} sG_c(s)G(s) = KK_2$$

- ▶ the steady-state error for a ramp input is:

$$\lim_{t \rightarrow \infty} e(t) = \frac{1}{K_v} = \frac{1}{KK_2}$$

Example: Mobile Robot Heading Angle Control

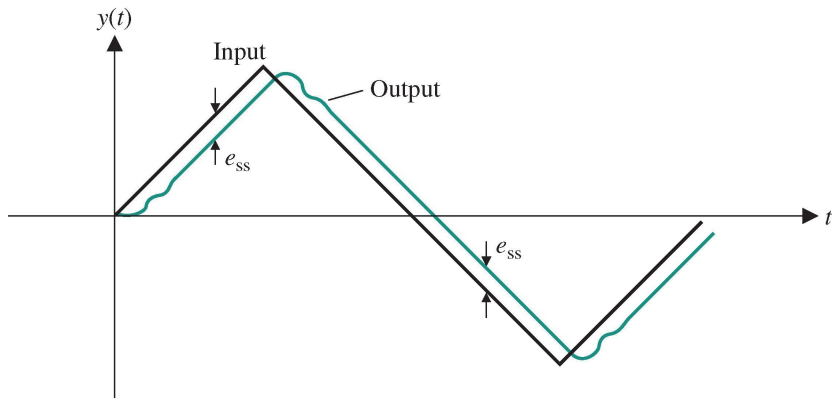

Copyright ©2017 Pearson Education, All Rights Reserved

- ▶ Transient response of the heading-angle steering control system to a triangular wave reference input
- ▶ The response shows the effect of the non-zero steady-state error $e_{ss} = 1/(KK_2)$

Outline

System Response to Test Input Signals

Impulse Response

Step Response

Frequency Response

Impulse Response

- ▶ LTI ODE System:

$$\dot{\mathbf{x}} = \mathbf{A}\mathbf{x} + \mathbf{B}\mathbf{u}$$

$$\mathbf{y} = \mathbf{C}\mathbf{x} + \mathbf{D}\mathbf{u}$$

$$G(s) = \mathbf{C}(s\mathbf{I} - \mathbf{A})^{-1}\mathbf{B} + \mathbf{D}$$

- ▶ **Impulse response:** response to an impulse input $u(t) = \delta(t)$:

$$\begin{aligned}y(t) &= \mathbf{C}e^{\mathbf{A}t}\mathbf{x}(0) + \int_0^t \mathbf{C}e^{\mathbf{A}(t-\tau)}\mathbf{B}\delta(\tau)d\tau + \mathbf{D}\delta(t) \\ &= \mathbf{C}e^{\mathbf{A}t}\mathbf{x}(0) + \mathbf{C}e^{\mathbf{A}t}\mathbf{B} + \mathbf{D}\delta(t)\end{aligned}$$

- ▶ The impulse response with zero initial conditions reveals the transfer function:

$$U(s) = 1 \quad \Rightarrow \quad Y(s) = G(s) \quad \Rightarrow \quad y(t) = \mathcal{L}^{-1}\{G(s)\}$$

Example: Impulse Response

- ▶ Transfer function:

$$G(s) = \frac{Y(s)}{U(s)} = \frac{9}{s + 10}$$

- ▶ The impulse response with zero initial conditions is obtained with $U(s) = 1$:

$$Y(s) = G(s) \quad \Rightarrow \quad y(t) = \mathcal{L}^{-1} \{G(s)\} = 9e^{-10t}$$

- ▶ Steady-state impulse response:

$$\lim_{t \rightarrow \infty} y(t) = 0$$

Impulse Response

- ▶ Let the impulse response with zero initial conditions of an LTI ODE be:

$$h(t) = \mathbf{C}e^{\mathbf{A}t}\mathbf{B} + \mathbf{D}\delta(t)$$

- ▶ Any input $u(t)$ can be decomposed into an infinite set of shifted impulses:

$$u(t) = \int_0^t \delta(t - \tau)u(\tau)d\tau$$

- ▶ By the principle of superposition, the forced response to $u(t)$ is the convolution of the input with the impulse response:

$$y(t) = \underbrace{\mathbf{C}e^{\mathbf{A}t}\mathbf{x}(0)}_{\text{natural response}} + \underbrace{\int_0^t h(t - \tau)u(\tau)d\tau}_{\text{forced response}}$$

Example: Impulse Response

- ▶ System:

$$\mathbf{A} = \begin{bmatrix} -1 & 1 \\ 0 & -2 \end{bmatrix}, \quad \mathbf{B} = \begin{bmatrix} 0 \\ 1 \end{bmatrix}, \quad \mathbf{C} = [1 \ 0], \quad \mathbf{D} = 0$$

- ▶ Input:


$$u(t) = \begin{cases} 1/\epsilon & \text{if } 0 \leq t < \epsilon \\ 0 & \text{else} \end{cases}$$

- ▶ Simulate with $\epsilon = 0.01$:

```
sys = ss(A, B, C, D); % create an LTI system  
y = lsim(sys,u,t,x0); % simulate response to input u
```



Example: Impulse Response

- **Case 1:** $u_1(t) = \delta(t)$

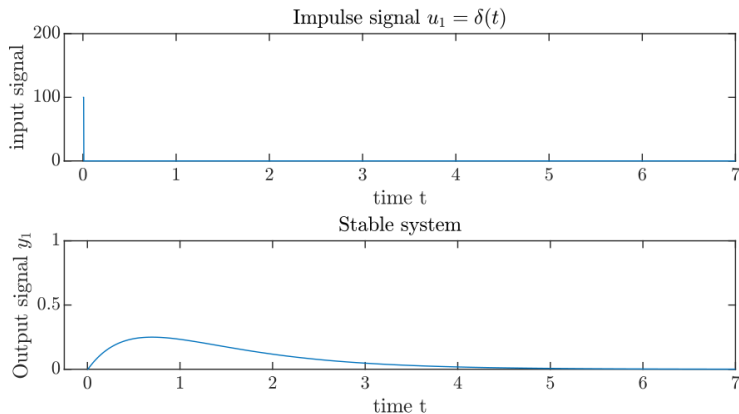



Example: Impulse Response

- ▶ **Case 2:** scale the input: $u_2(t) = 2u_1(t) = 2\delta(t)$

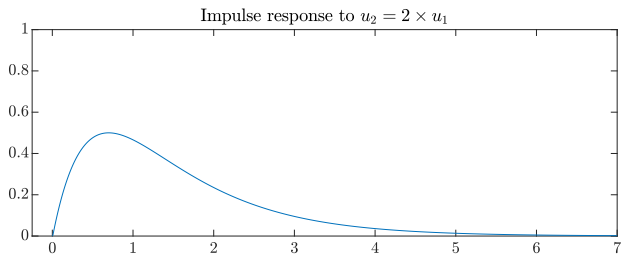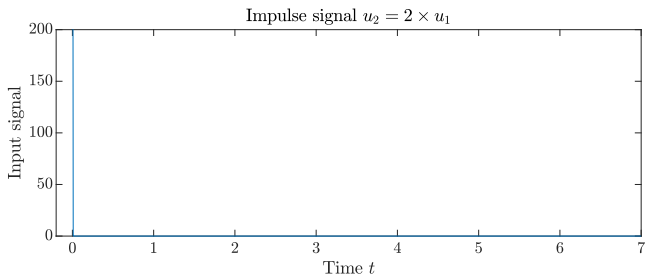



Example: Impulse Response

- ▶ **Case 3:** shift the input: $u_3(t) = u_1(t - 1) = \delta(t - 1)$

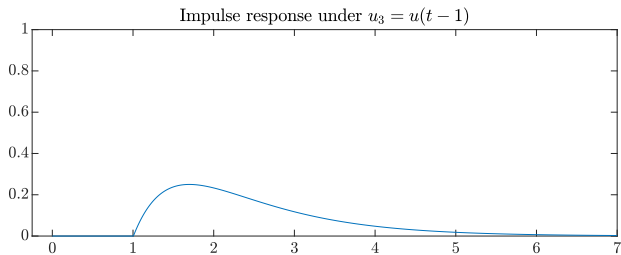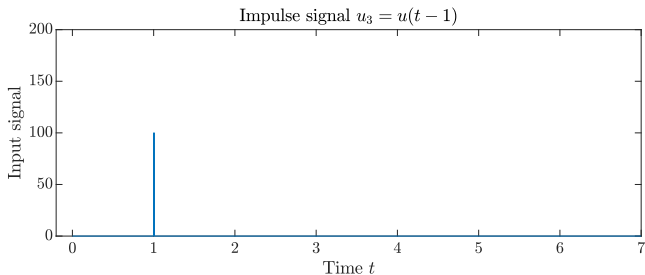


Example: Impulse Response

- **Case 4:** shift the input: $u_4(t) = u_1(t - 2) = \delta(t - 2)$

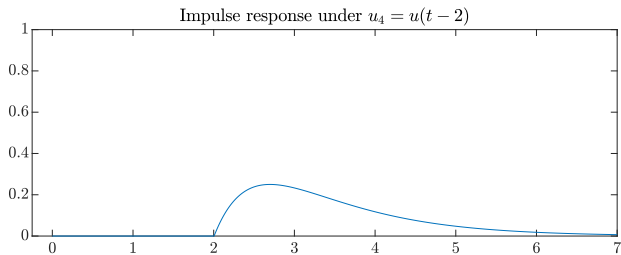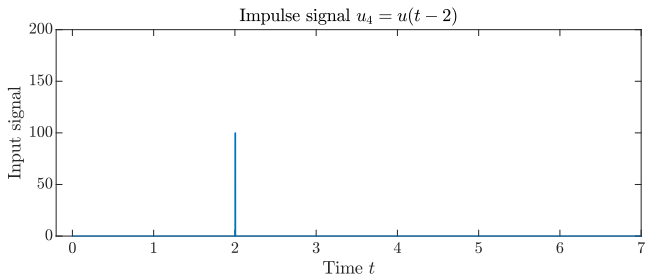


Example: Impulse Response

- **Case 5:** sum three inputs: $u_5(t) = u_1(t) + u_3(t) + u_4(t)$

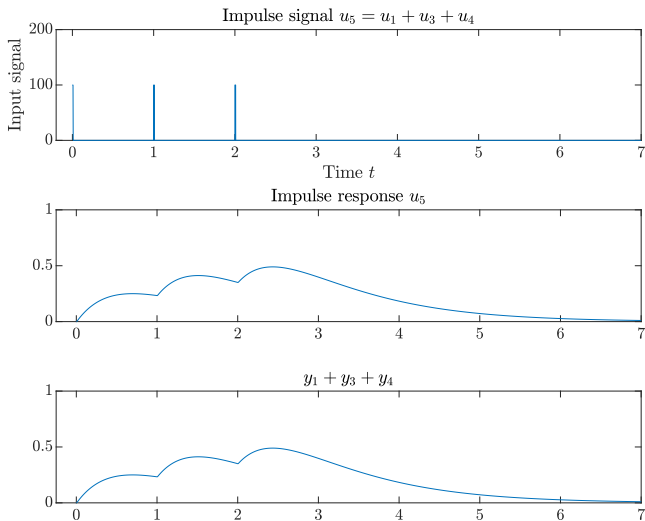

Impulse Response vs s -Plane Pole Locations

- ▶ Impulse response of an abstract control system for various transfer function pole locations in the s -plane

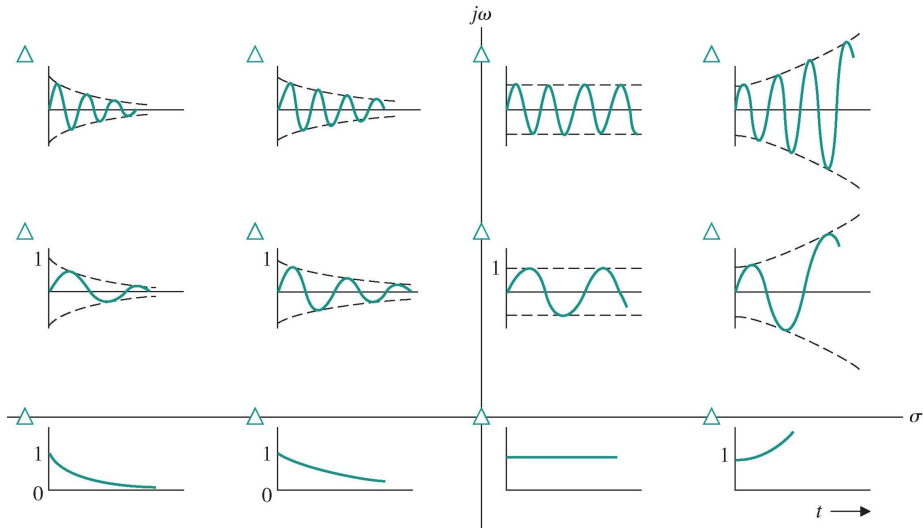

Outline

System Response to Test Input Signals

Impulse Response

Step Response

Frequency Response

Step Response

- ▶ LTI ODE system:

$$\dot{\mathbf{x}} = \mathbf{A}\mathbf{x} + \mathbf{B}u$$

$$\mathbf{y} = \mathbf{C}\mathbf{x} + \mathbf{D}u$$

$$G(s) = \mathbf{C}(s\mathbf{I} - \mathbf{A})^{-1}\mathbf{B} + \mathbf{D}$$

- ▶ **Exponential response:** SISO LTI system response to $u(t) = e^{st}$ for $t \geq 0$ such that $s \in \mathbb{C}$ is not an eigenvalue of \mathbf{A} :

$$y(t) = \underbrace{\mathbf{C}e^{\mathbf{A}t}(\mathbf{x}(0) - (s\mathbf{I} - \mathbf{A})^{-1}\mathbf{B})}_{\text{transient response}} + \underbrace{(\mathbf{C}(s\mathbf{I} - \mathbf{A})^{-1}\mathbf{B} + \mathbf{D})e^{st}}_{\text{steady-state response}}$$

- ▶ **Step response:** the response to a step input $u(t) = \begin{cases} 1, & t \geq 0 \\ 0, & t < 0 \end{cases}$ is a special case of $u(t) = e^{st}$ with $s = 0$:

$$y(t) = \underbrace{\mathbf{C}e^{\mathbf{A}t}(\mathbf{x}(0) + \mathbf{A}^{-1}\mathbf{B})}_{\text{transient response}} + \underbrace{G(0)}_{\text{steady-state response}}$$

Example: Step Response

- ▶ Transfer function:

$$G(s) = \frac{Y(s)}{U(s)} = \frac{9}{s + 10}$$

- ▶ The step response with zero initial conditions is obtained with $U(s) = \frac{1}{s}$:

$$Y(s) = \frac{G(s)}{s} = \frac{9}{s(s + 10)} = \frac{9}{10s} - \frac{9}{10(s + 10)}$$

- ▶ Time-domain step response:

$$y(t) = \mathcal{L}^{-1}\{Y(s)\} = \underbrace{0.9}_{\text{steady-state}} - \underbrace{0.9e^{-10t}}_{\text{transient}}$$

Example: Stable System Step Response


- ▶ LTI system:

$$\mathbf{A} = \begin{bmatrix} -1 & 4 \\ -3 & -2 \end{bmatrix}, \quad \mathbf{B} = \begin{bmatrix} 0 \\ 1 \end{bmatrix}, \quad \mathbf{C} = [1 \ 0], \quad \mathbf{D} = 0.$$

- ▶ Transfer function:

$$G(s) = \mathbf{C}(s\mathbf{I} - \mathbf{A})^{-1}\mathbf{B} + \mathbf{D} = \frac{4}{s^2 + 3s + 14}$$

- ▶ Step response:

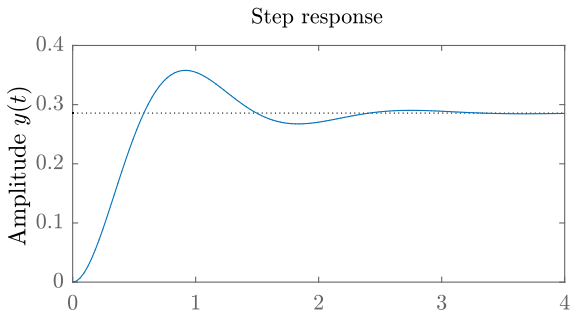

Example: Unstable System Step Response


- ▶ LTI system:

$$\mathbf{A} = \begin{bmatrix} 1 & 4 \\ -3 & 2 \end{bmatrix}, \quad \mathbf{B} = \begin{bmatrix} 0 \\ 1 \end{bmatrix}, \quad \mathbf{C} = [1 \quad 0], \quad \mathbf{D} = 0.$$

- ▶ Transfer function:

$$G(s) = \mathbf{C}(s\mathbf{I} - \mathbf{A})^{-1}\mathbf{B} + \mathbf{D} = \frac{4}{s^2 - 3s + 14}$$



- ▶ Step response:

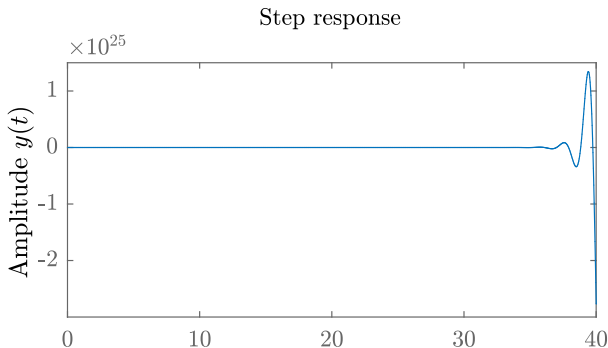

Step Response Performance Measures

- ▶ The step response of a feedback control system is evaluated using several performance criteria:
 - ▶ **Rise time**
 - ▶ **Percent overshoot**
 - ▶ **Settling time**
 - ▶ **Steady-state error**

Second-order Feedback Control System

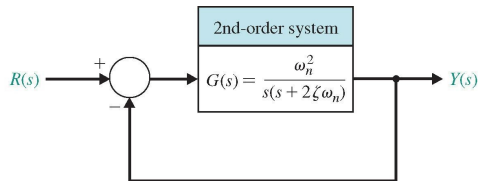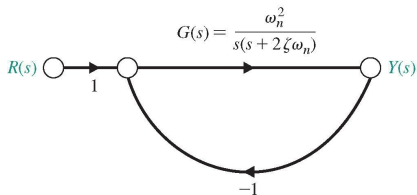

Copyright ©2017 Pearson Education, All Rights Reserved

- ▶ Consider a second-order feedback control system
- ▶ Closed-loop transfer function:

$$T(s) = \frac{Y(s)}{R(s)} = \frac{G(s)}{1 + G(s)} = \frac{\omega_n^2}{s^2 + 2\zeta\omega_n s + \omega_n^2}$$

with **natural frequency** ω_n and **damping ratio** ζ

Second-order System Poles

▶ Transfer function: $T(s) = \frac{Y(s)}{R(s)} = \frac{G(s)}{1 + G(s)} = \frac{\omega_n^2}{s^2 + 2\zeta\omega_n s + \omega_n^2}$

▶ Transfer function poles:

$$p = -\zeta\omega_n \pm \omega_n\sqrt{\zeta^2 - 1}$$

Response	Damping ratio	Poles
Underdamped	$\zeta < 1$	$-\zeta\omega_n \pm j\omega_n\sqrt{1 - \zeta^2}$
Critically damped	$\zeta = 1$	$-\omega_n, -\omega_n$
Overdamped	$\zeta > 1$	$-\zeta\omega_n \pm \omega_n\sqrt{\zeta^2 - 1}$

▶ The natural frequency ω_n and damping ratio ζ of a pole p can be obtained as:

$$\omega_n = |p| \quad \zeta = -\cos(\angle p)$$

Underdamped Second-order System Impulse Response

- ▶ Consider the underdamped and critically damped cases ($0 \leq \zeta \leq 1$)
- ▶ Impulse input: $r(t) = \delta(t)$, $R(s) = 1$
- ▶ Impulse response (s domain): reveals the transfer function:


$$Y(s) = \frac{G(s)}{1 + G(s)} = \frac{\omega_n^2}{s^2 + 2\zeta\omega_n s + \omega_n^2} = \frac{\omega_n^2}{(s + \alpha)^2 + \omega_d^2}$$

where we introduced the terms:

- ▶ **damping constant:** $\alpha = \zeta\omega_n$
 - ▶ **damped frequency:** $\omega_d = \omega_n\sqrt{1 - \zeta^2}$
- ▶ Impulse response (t domain):

$$\begin{aligned}y(t) &= \mathcal{L}^{-1}\{Y(s)\} = \frac{\omega_n}{\sqrt{1 - \zeta^2}} e^{-\zeta\omega_n t} \sin(\omega_n\sqrt{1 - \zeta^2}t) \\ &= \left(\frac{\alpha^2}{\omega_d} + \omega_d\right) e^{-\alpha t} \sin(\omega_d t)\end{aligned}$$

Underdamped Second-order System Impulse Response

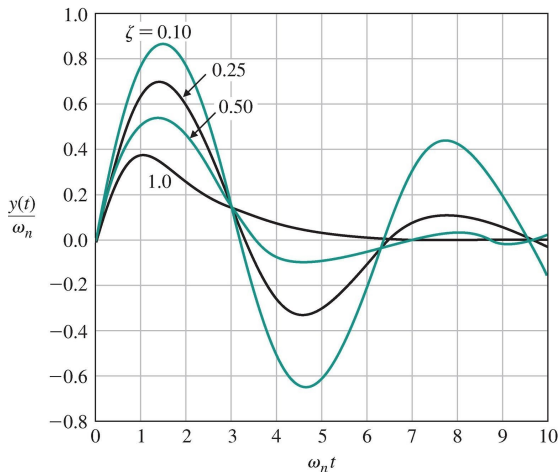

Copyright ©2017 Pearson Education, All Rights Reserved

- ▶ As the damping ζ decreases, the poles approach the imaginary axis and the response becomes increasingly oscillatory

Underdamped Second-order System Step Response

- ▶ Step response (s domain): obtained with $R(s) = \frac{1}{s}$:

$$Y(s) = \frac{G(s)}{s(1 + G(s))} = \frac{\omega_n^2}{s(s^2 + 2\zeta\omega_n s + \omega_n^2)} = \frac{1}{s} - \frac{(s + \zeta\omega_n) + \zeta\omega_n}{(s + \zeta\omega_n)^2 + \omega_n^2(1 - \zeta^2)}$$













- ▶ Step response (t domain):

$$\begin{aligned}y(t) &= \mathcal{L}^{-1}\{Y(s)\} = 1 - \frac{1}{\sqrt{1 - \zeta^2}} e^{-\zeta\omega_n t} \sin(\omega_n \sqrt{1 - \zeta^2} t + \cos^{-1}(\zeta)) \\ &= 1 - e^{-\alpha t} \left(\cos(\omega_d t) + \frac{\alpha}{\omega_d} \sin(\omega_d t) \right)\end{aligned}$$

- ▶ The derivative of the step response is equal to the impulse response:


$$\frac{d}{dt}y(t) = \left(\frac{\alpha^2}{\omega_d} + \omega_d \right) e^{-\alpha t} \sin(\omega_d t)$$

Second-order System Step Response

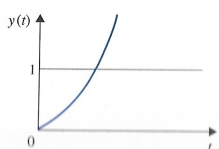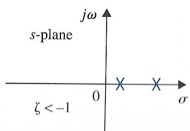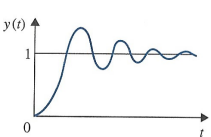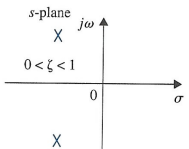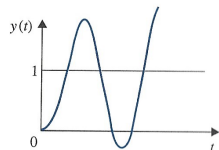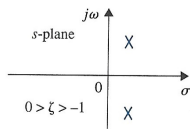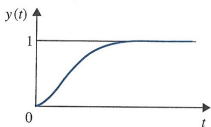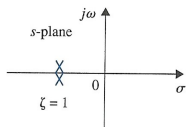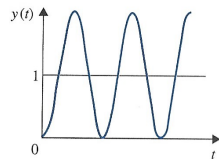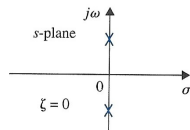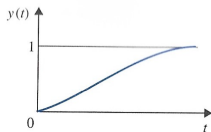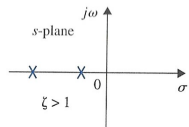

Second-order System Step Response


- ▶ If the poles are complex, the step response has oscillations and overshoot
- ▶ As the poles move toward the real axis, maintaining a fixed distance from the origin (ζ increasing for fixed ω_n), the oscillations and overshoot decrease
- ▶ If ω_n increases, the poles move further left in the left half plane and the oscillations reduce faster
- ▶ If all poles are on the negative real axis, there are no oscillations or overshoot
- ▶ If there is a pole in the open right half plane, then the step response contains a term that goes to ∞

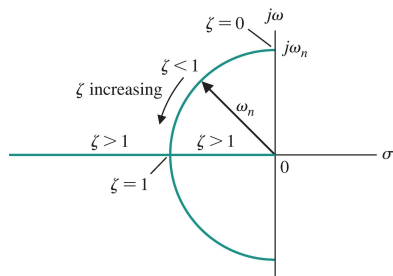

Copyright © 2017 Pearson Education, All Rights Reserved

- ▶ For constant ω_n , as ζ varies, the complex conjugate roots follow a circular locus

Underdamped Second-order System Step Response

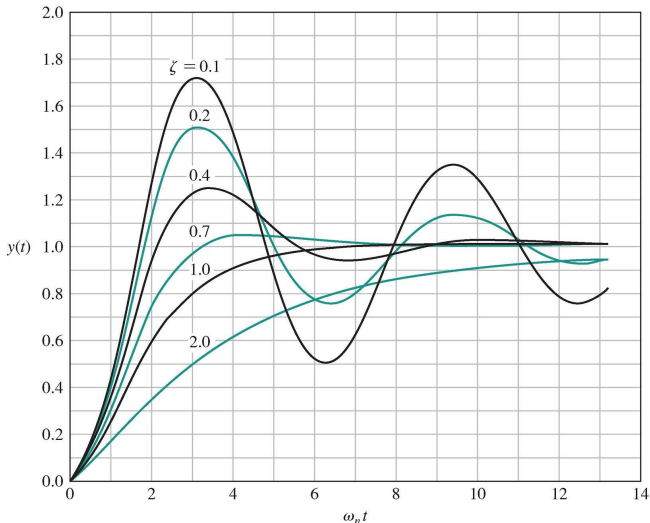

Copyright ©2017 Pearson Education, All Rights Reserved

- ▶ As the damping ζ decreases, the poles approach the imaginary axis and the response becomes increasingly oscillatory

Step Response Performance Measures


- ▶ **Rise time** t_r : time for the system step response $y(t)$ to go from $\delta\%$ to $1 - \delta\%$ of the steady-state value
- ▶ **Peak time** t_p : time at which the system step response $y(t)$ achieves its maximum value (**defined only for underdamped systems**)
- ▶ **Percent overshoot**: the max value of the system step response, $y(t_p)$, expressed as a percentage of the steady-state value, $y(\infty) = \lim_{t \rightarrow \infty} y(t)$:

$$\text{percent overshoot} = \frac{y(t_p) - y(\infty)}{y(\infty)} \times 100\%$$

- ▶ **Settling time** t_s : the time required for the step response to settle within $\delta\%$ of the steady-state value, i.e., for all $t \geq t_s$:

$$|y(t) - y(\infty)| \leq \frac{\delta}{100}$$


Step Response Performance Measures

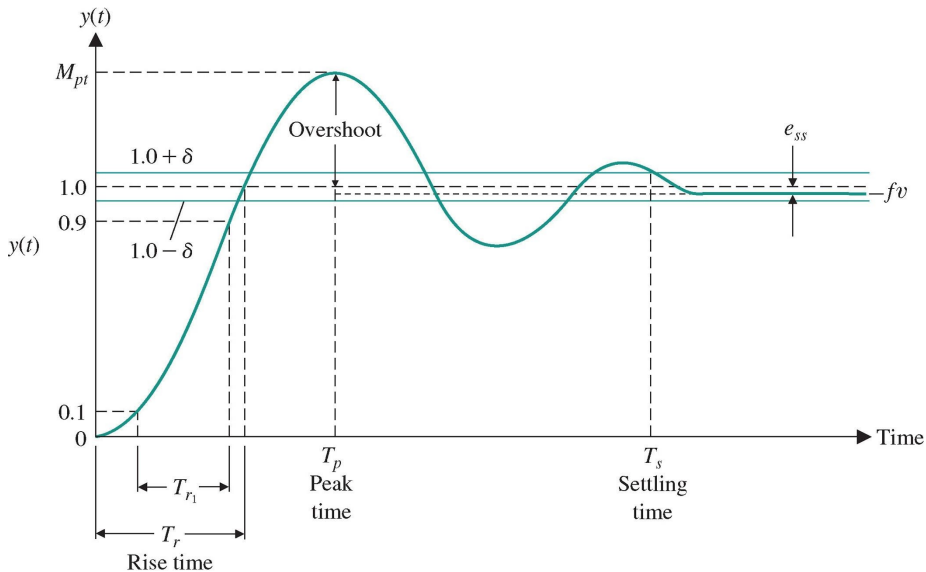


Rise Time

- ▶ **Rise time:** an exact expression for t_r is challenging to obtain
- ▶ The best linear fit to the 10%-to-90% rise time is accurate for $0.3 < \zeta < 0.8$:


$$t_r \approx \frac{2.16\zeta + 0.6}{\omega_n}$$

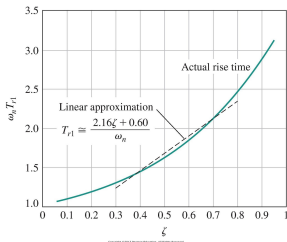

(a) Rise time

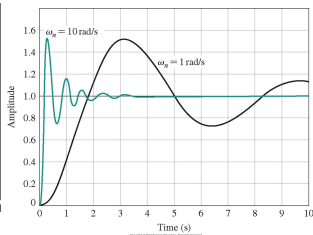

(b) Effect of ω_n for $\zeta = 0.2$

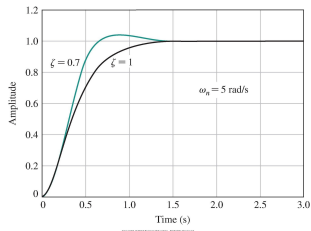

(c) Effect of ζ for $\omega_n = 5$

Peak Time

- ▶ **Peak time:** obtained by setting the derivative of the step response to zero and solving for t :

$$0 = \left(\frac{\alpha^2}{\omega_d} + \omega_d \right) e^{-\alpha t} \sin(\omega_d t) \Rightarrow t = \frac{k\pi}{\omega_d}, \quad k = 0, 1, 2, \dots$$

- ▶ The maximum overshoot occurs at the first peak:

$$t_p = \frac{\pi}{\omega_d} = \frac{\pi}{\omega_n \sqrt{1 - \zeta^2}}$$

- ▶ The maximum value of the system step response is:


$$y(t_p) = 1 + e^{-\alpha \frac{\pi}{\omega_d}} = 1 + e^{-\frac{\zeta \pi}{\sqrt{1 - \zeta^2}}}$$

Percent Overshoot

- ▶ **Percent overshoot:** since $y(\infty) = \lim_{t \rightarrow \infty} y(t) = 1$:

$$\begin{aligned} \text{percent overshoot} &= \frac{y(t_p) - y(\infty)}{y(\infty)} \times 100\% = e^{-\alpha \frac{\pi}{\omega_d}} \times 100\% \\ &= e^{-\frac{\zeta \pi}{\sqrt{1-\zeta^2}}} \times 100\% \end{aligned}$$

- ▶ There is a trade-off between swiftness of response and percent overshoot

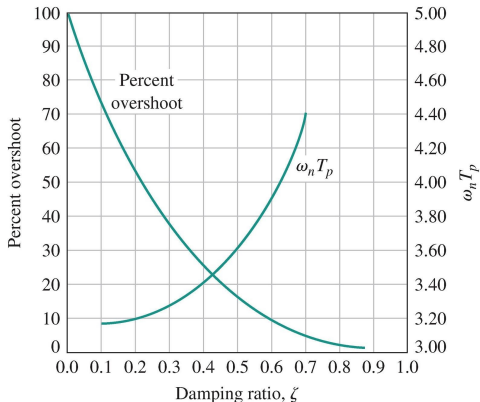

Settling Time

- ▶ Underdamped second-order system step response:

$$y(t) = 1 - e^{-\alpha t} \left(\cos(\omega_d t) + \frac{\alpha}{\omega_d} \sin(\omega_d t) \right)$$

- ▶ **Settling time:** since the cosine and sine terms oscillate, approximate the time required for the step response to settle within $\delta\%$ of the steady-state value by calculating the time at which the exponential term $e^{-\alpha t}$ becomes equal to $\delta/100$:

$$e^{-\alpha t_s} \approx \frac{\delta}{100} \quad \Rightarrow \quad t_s \approx -\frac{1}{\alpha} \ln \frac{\delta}{100}$$

- ▶ For $\delta = 2\%$, the settling time is: $t_s \approx \frac{4}{\alpha} = \frac{4}{\zeta \omega_n}$

Step Response Performance Measures

- ▶ It is desirable to achieve small t_r , small percent overshoot, and small t_s
- ▶ As ω_n increases with fixed ζ , t_r decreases, t_p decreases, the percent overshoot stays the same, and t_s decreases
- ▶ As ζ increases with fixed ω_n , t_r stays the same, t_p increases, the percent overshoot decreases, and t_s decreases
- ▶ If desired upper bounds are given:

$$t_r \leq \bar{t}_r \quad t_p \leq \bar{t}_p \quad \text{p.o.} \leq \text{p}\bar{\text{o.}} \quad t_s \leq \bar{t}_s$$

we can obtain constraints for ζ and ω_n , which determine valid regions for the transfer function poles $-\zeta\omega_n \pm j\omega_n\sqrt{1-\zeta^2}$ in the complex plane:

$$\begin{aligned} \frac{2.16\zeta + 0.6}{\omega_n} &\leq \bar{t}_r & \frac{\zeta}{\sqrt{1-\zeta^2}}\pi &\geq -\ln \frac{\text{p}\bar{\text{o.}}}{100} \\ \frac{\pi}{\omega_n\sqrt{1-\zeta^2}} &\leq \bar{t}_p & \frac{4}{\zeta\omega_n} &\leq \bar{t}_s \end{aligned}$$

Effect of Additional Poles or Zeros

- ▶ So far we analyzed the step response of an underdamped second-order system with transfer function:

$$T(s) = \frac{\omega_n^2}{s^2 + 2\zeta\omega_n s + \omega_n^2}$$

- ▶ What happens if the transfer function contains zeros or additional poles?

Effect of Poles on the Step Response


- ▶ From the partial fraction expansion of the transfer function, we know that a pole p contributes a term of the form re^{pt}
- ▶ If any pole is in the right half-plane ($\text{Re}(p) > 0$), then the step response will go to infinity (unstable system)
- ▶ If any pole is far left in the left half-plane ($\text{Re}(p) \ll 0$), then its contribution to the step response dies out quickly
- ▶ If the poles can be divided into a set that is close to the origin, and another set that is far away, then the poles that are close to the origin are called **dominant poles**. The exponential terms in the step response of the dominant poles determine the overall system response.
- ▶ Adding a left half-plane pole to the transfer function makes the response **slower** because an additional exponential term must die out before the system reaches its final value

Introducing a Pole in a Second-order System

- ▶ Introduce a pole $s = -1/\gamma$ in the transfer function:

$$T_\gamma(s) = \frac{\omega_n^2}{(s^2 + 2\zeta\omega_n s + \omega_n^2)(\gamma s + 1)}$$

- ▶ If $|1/\gamma| \geq 10|\zeta\omega_n|$, then $T_\gamma(s)$ can be approximated by $T(s)$ since the contribution of the new pole to the step response is dominated by the original two poles

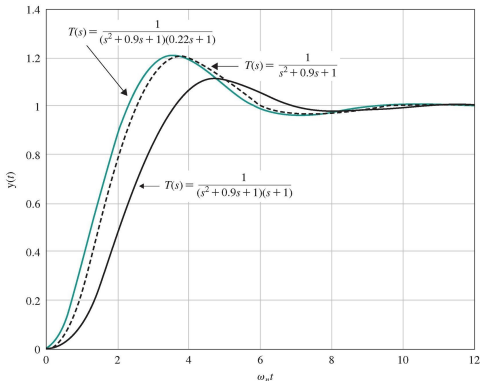

Introducing a Zero in a Second-order System

- ▶ Introduce a zero $s = -a$ in the transfer function:

$$T_a(s) = \frac{(\frac{1}{a}s + 1)\omega_n^2}{s^2 + 2\zeta\omega_n s + \omega_n^2}$$

- ▶ The reason for writing $(\frac{1}{a}s + 1)$ instead of $s + a$ is to maintain a steady-state value of 1
- ▶ The new transfer function can be decomposed as:

$$T_a(s) = \frac{\omega_n^2}{s^2 + 2\zeta\omega_n s + \omega_n^2} + \frac{s}{a} \frac{\omega_n^2}{s^2 + 2\zeta\omega_n s + \omega_n^2} = T(s) + \frac{s}{a} T(s)$$


- ▶ The response of the third order system to a step $R(s) = 1/s$ is:

$$Y_a(s) = \left(T(s) + \frac{s}{a} T(s) \right) \frac{1}{s} = Y(s) + \frac{s}{a} Y(s)$$
$$y_a(t) = y(t) + \frac{1}{a} \dot{y}(t)$$

where $Y(s)$ and $y(t)$ are the s - and t -domain step response of the original second-order system

Introducing a Zero in a Second-order System


- Step response of a system with transfer function $T_a(s) = \frac{(\frac{1}{a}s+1)\omega_n^2}{s^2+2\zeta\omega_n s+\omega_n^2}$ and $\zeta = 0.45$

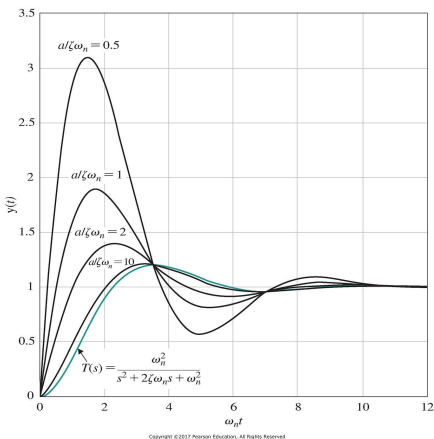

- As a increases, the zero moves farther into the left half-plane and the step response of $T_a(s)$ approaches that of the second-order system $T(s)$

Introducing a Zero in a Second-order System

- ▶ We can see from the step-response of $T_a(s)$ that adding a zero in the left half-plane makes the step response **faster**:
 - ▶ the rise time decreases
 - ▶ the peak time decreases
 - ▶ the overshoot increases
 - ▶ the settling time does not change
- ▶ If the zero is added in the right half-plane (i.e., $a < 0$), then $\dot{y}(t)$ is subtracted from $y(t)$ to produce $y_a(t)$. The response is **slower** and can go decrease before rising to its steady state value (**undershoot**).

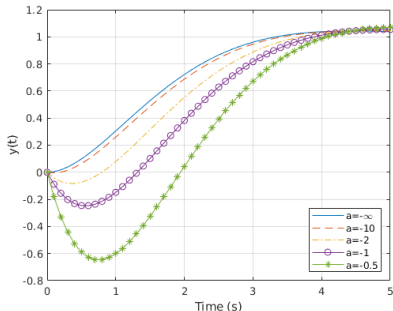

Dominant Pole-Zero Approximation

- ▶ If a high-order system has a cluster of poles and zeros that are much closer (e.g., 5 times or more) to the origin than the remaining poles and zeros, then the system can be approximated by a lower order system with only those dominant poles and zeros
- ▶ **Example:** if $a \gg \zeta\omega_n > 0$ and $1/\gamma \gg \zeta\omega_n > 0$, then:

$$T_{a,\gamma}(s) = \frac{\omega_n^2(\frac{1}{a}s + 1)}{(s^2 + 2\zeta\omega_n s + \omega_n^2)(\gamma s + 1)} \approx T(s) = \frac{\omega_n^2}{s^2 + 2\zeta\omega_n s + \omega_n^2}$$

Example

- Consider a control system with transfer function:

$$T(s) = \frac{Y(s)}{R(s)} = \frac{108(s + 3)}{(s + 9)(s^2 + 8s + 36)}$$

- Determine the steady-state error for a unit step input.
- Assume that the complex poles are dominant. Determine the percent overshoot and the settling time to within 2% of the steady-state value.
- Plot the actual system response and compare it with the estimates of part (b).

Example: Part (a)

- ▶ The error is:

$$E(s) = R(s) - Y(s) = R(s) - T(s)R(s) = (1 - T(s))R(s)$$

- ▶ The steady-state error for input $R(s) = 1/s$ is:

$$\begin{aligned}\lim_{t \rightarrow \infty} e(t) &= \lim_{s \rightarrow 0} sE(s) = \lim_{s \rightarrow 0} (1 - T(s)) \\ &= \lim_{s \rightarrow 0} \left(1 - \frac{108(s+3)}{(s+9)(s^2+8s+36)} \right) = 1 - \frac{108(3)}{9(36)} = 0\end{aligned}$$

Example: Part (b)

- ▶ Assuming that the complex poles are dominant:

$$T(s) = \frac{36\left(\frac{s}{3} + 1\right)}{(s + 9)(s^2 + 8s + 36)} \approx \frac{36}{s^2 + 8s + 36}$$

- ▶ The second-order system approximation has natural frequency $\omega_n = 6$ and damping ratio $\zeta = \frac{8}{2\omega_n} = \frac{2}{3}$.
- ▶ The percent overshoot is:


$$\text{p.o.} = 100 \exp\left(-\frac{\zeta}{\sqrt{1-\zeta^2}}\pi\right) = 100 \exp\left(-\frac{2\pi}{\sqrt{5}}\right) \approx 6\%$$

- ▶ The settling time to within 2% of the steady-state value is:


$$t_s \approx \frac{4}{\zeta\omega_n} = 1 \text{ second.}$$

Example: Part (b)

- ▶ The percent overshoot can also be determined approximately from the second-order system plots:

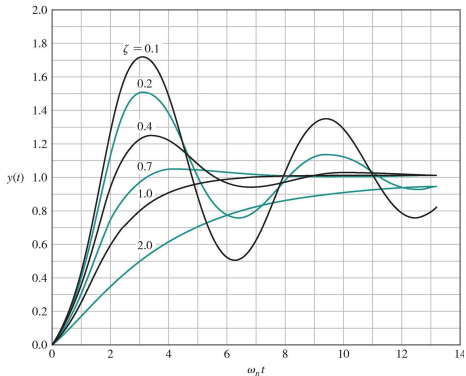


Copyright ©2017 Pearson Education, All Rights Reserved

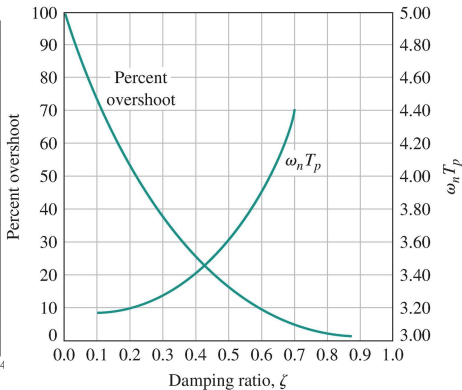

Copyright ©2017 Pearson Education, All Rights Reserved

Example: Part (c)

- ▶ The step response of the original system is:

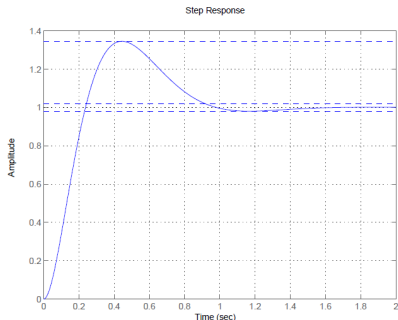

```
1 sys = tf([108 324],[1 17 108 324]);
2 characteristics = stepinfo(sys,
3     'RiseTimeLimits',[0.05,0.95],
4     'SettlingTimeThreshold', 0.02);
5 stepplot(sys);
6 hold on;
7 plot([0,2],[characteristics.Peak,
8     characteristics.Peak],'b--');
```

- ▶ The actual percent overshoot and settling time are:

$$\text{p.o} = 34.4\% \quad \text{and} \quad t_s = 1.18 \text{ second.}$$

- ▶ The difference in the actual and estimated percent overshoot is due to the term $\left(\frac{s}{a} + 1\right)$ in the numerator, which does not satisfy the requirement for an accurate dominant pole-zero approximation:

$$3 = a \not\gg \zeta\omega_n = 4$$

Outline

System Response to Test Input Signals

Impulse Response

Step Response

Frequency Response

Exponential Response

- ▶ LTI ODE System:

$$\begin{aligned}\dot{\mathbf{x}} &= \mathbf{A}\mathbf{x} + \mathbf{B}u \\ \mathbf{y} &= \mathbf{C}\mathbf{x} + \mathbf{D}u\end{aligned}$$

$$G(s) = \mathbf{C}(s\mathbf{I} - \mathbf{A})^{-1}\mathbf{B} + \mathbf{D}$$

- ▶ **Exponential response:** SISO LTI system response to $u(t) = e^{st}$ for $t \geq 0$ such that $s \in \mathbb{C}$ is not an eigenvalue of \mathbf{A} :

$$y(t) = \underbrace{\mathbf{C}e^{\mathbf{A}t}(\mathbf{x}(0) - (s\mathbf{I} - \mathbf{A})^{-1}\mathbf{B})}_{\text{transient response}} + \underbrace{(\mathbf{C}(s\mathbf{I} - \mathbf{A})^{-1}\mathbf{B} + \mathbf{D})e^{st}}_{\text{steady-state response}}$$

- ▶ The transfer function $G(s)$ is a complex number:

$$G(s) = |G(s)|e^{j\angle G(s)}$$

- ▶ Steady-state exponential response:

$$y_{ss}(t) = |G(s)|e^{j\angle G(s)}e^{st} = |G(s)|e^{st+j\angle G(s)}$$

Frequency Response

- ▶ LTI ODE System:

$$\dot{\mathbf{x}} = \mathbf{A}\mathbf{x} + \mathbf{B}\mathbf{u}$$

$$\mathbf{y} = \mathbf{C}\mathbf{x} + \mathbf{D}\mathbf{u}$$

$$G(s) = \mathbf{C}(s\mathbf{I} - \mathbf{A})^{-1}\mathbf{B} + \mathbf{D}$$

- ▶ **Frequency response:** response to a sinusoidal input $u(t) = \sin(\omega t + \phi)$

Frequency Response

The steady-state response of a system with transfer function $G(s)$ to a sinusoidal input $u(t) = \sin(\omega t + \phi)$ is a sinusoid of the **same frequency** with **amplitude scaled by $|G(j\omega)|$** and **phase shifted by $\angle G(j\omega)$** :

$$y_{ss}(t) = |G(j\omega)| \sin(\omega t + \phi + \angle G(j\omega))$$

- ▶ The **magnitude** $|G(j\omega)|$ is determined from the ratio of the amplitudes of the output versus the input sinusoids
- ▶ The **phase** $\angle G(j\omega)$ is determined from the ratio of the time of the output versus the input zero crossings

Example: Stable System Frequency Response

- ▶ System 1:

$$\mathbf{A}_1 = \begin{bmatrix} -1 & 4 \\ -3 & -2 \end{bmatrix}, \quad \mathbf{B}_1 = \begin{bmatrix} 0 \\ 1 \end{bmatrix}, \quad \mathbf{C}_1 = [1 \ 0], \quad \mathbf{D}_1 = 0$$


$$G_1(s) = \frac{4}{s^2 + 3s + 14} \quad |G_1(j)| = 0.3 \quad \angle G(j) = -13^\circ$$

- ▶ System 2:

$$\mathbf{A}_2 = \begin{bmatrix} -1 & 1 \\ 0 & -2 \end{bmatrix}, \quad \mathbf{B}_2 = \begin{bmatrix} 0 \\ 5 \end{bmatrix}, \quad \mathbf{C}_2 = [1 \ 0], \quad \mathbf{D}_2 = 0$$

$$G_2(s) = \frac{5}{s^2 + 3s + 2} \quad |G_2(j)| = 1.58 \quad \angle G_2(j) = -71.5^\circ$$

- ▶ Response to $u(t) = \sin(t)$

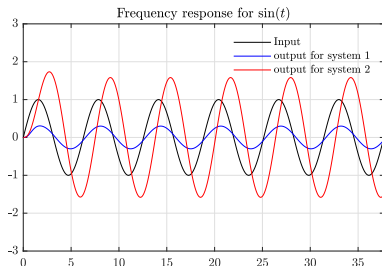

Example: Stable System Frequency Response

- System 1:

$$\mathbf{A}_1 = \begin{bmatrix} -1 & 4 \\ -3 & -2 \end{bmatrix}, \quad \mathbf{B}_1 = \begin{bmatrix} 0 \\ 1 \end{bmatrix}, \quad \mathbf{C}_1 = [1 \ 0], \quad \mathbf{D}_1 = 0$$

$$G_1(s) = \frac{4}{s^2 + 3s + 14} \quad |G_1(0.5j)| = 0.29 \quad \angle G_1(0.5j) = -6.2^\circ$$

- System 2:

$$\mathbf{A}_2 = \begin{bmatrix} -1 & 1 \\ 0 & -2 \end{bmatrix}, \quad \mathbf{B}_2 = \begin{bmatrix} 0 \\ 5 \end{bmatrix}, \quad \mathbf{C}_2 = [1 \ 0], \quad \mathbf{D}_2 = 0$$

$$G_2(s) = \frac{5}{s^2 + 3s + 2} \quad |G_2(0.5j)| = 2.17 \quad \angle G_2(0.5j) = -40.6^\circ$$

- Response to $u(t) = \sin(0.5t)$

